

SR90 - KR90

PORTAVALIGIA SPECIFICO - SPECIFIC CASE HOLDER  
PORTE-VALISE SPÉCIFIQUE - SPEZIFISCHER KOFFER-TRÄGER  
PORTA-EQUIPAJE ESPECÍFICO

# KYMCO DINK 2007

## 125cc

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

1



**SUPPORTO**  
SUPPORT  
SUPPORT  
HALTERUNG  
SOPORTE

**Q.TY n.1**

2

**SUPPORTO**  
SUPPORT  
SUPPORT  
HALTERUNG  
SOPORTE

**Q.TY n.2(Dx-Sx)**

3



**VITE TCEI M6x30mm**  
SCREW M6x30mm  
VIS M6x30mm  
SCHRAUBE M6x30mm  
TORNILLO M6x30mm

**Q.TY n.2**

4



**VITE TSCEI M6x25mm**  
SCREW M6x25mm  
VIS M6x25mm  
SCHRAUBE M6x25mm  
TORNILLO M6x25mm

**Q.TY n.2**

5



**VITE TE M6x20mm**  
SCREW M6x20mm  
VIS M6x20mm  
SCHRAUBE M6x20mm  
TORNILLO M6x20mm


**Q.TY n.2**

6



**VITE TCEI M6x25mm**  
SCREW M6x25mm  
VIS M6x25mm  
SCHRAUBE M6x25mm  
TORNILLO M6x25mm

**Q.TY n.4**

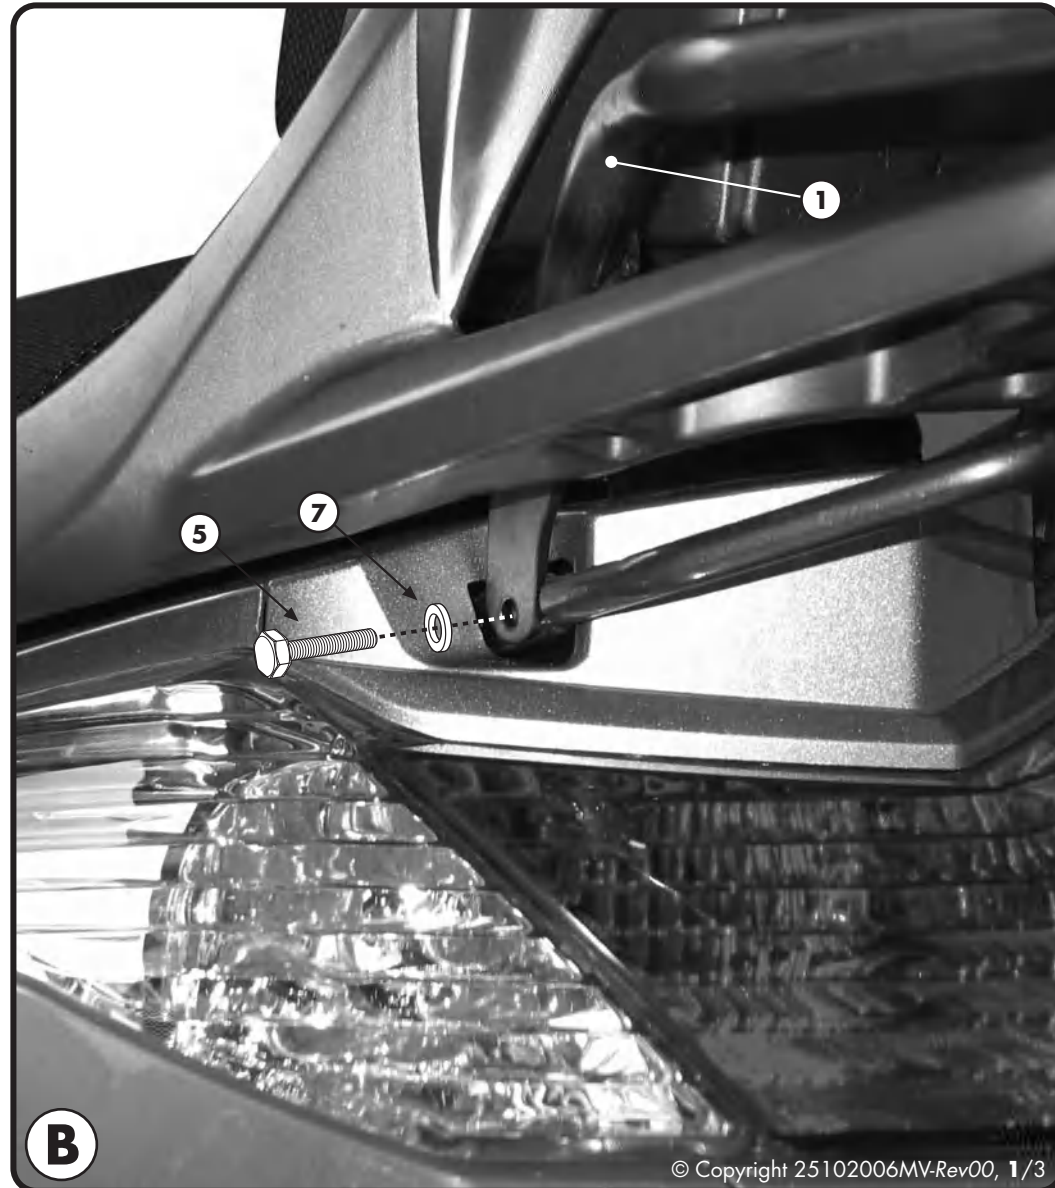

SR90 - KR90

PORTAVALIGIA SPECIFICO - SPECIFIC CASE HOLDER  
PORTE-VALISE SPECIFIQUE - SPEZIFISCHER KOFFER-TRÄGER  
PORTA-EQUIPAJE ESPECIFICO

# KYMCO DINK 2007 125cc

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

7




**RONDELLA Ø6mm**  
WASHER Ø6mm  
RONDELLE Ø6mm  
SCHEIBE Ø6mm  
ARANDELA Ø6mm

**Q.TY n.2**

8

**PARTICOLARI INCLUSI NEL  
KIT VITERIA DELLA PIASTRA**  
COMPONENTS INCLUDED IN  
THE FITTING KIT OF THE PLATE  
PIÈCES INCLUES DANS LE KIT  
DE VIS DE LA PLATINE  
DIE EINZELNEN TEILE SIND BEI  
MONTAGEKIT DER PLATTE  
ENTHALTEN  
DESPIECES INCLUIDOS EN EL  
KIT DE ANCLAJES DE LA  
PARRILLA

**Q.TY n.-**

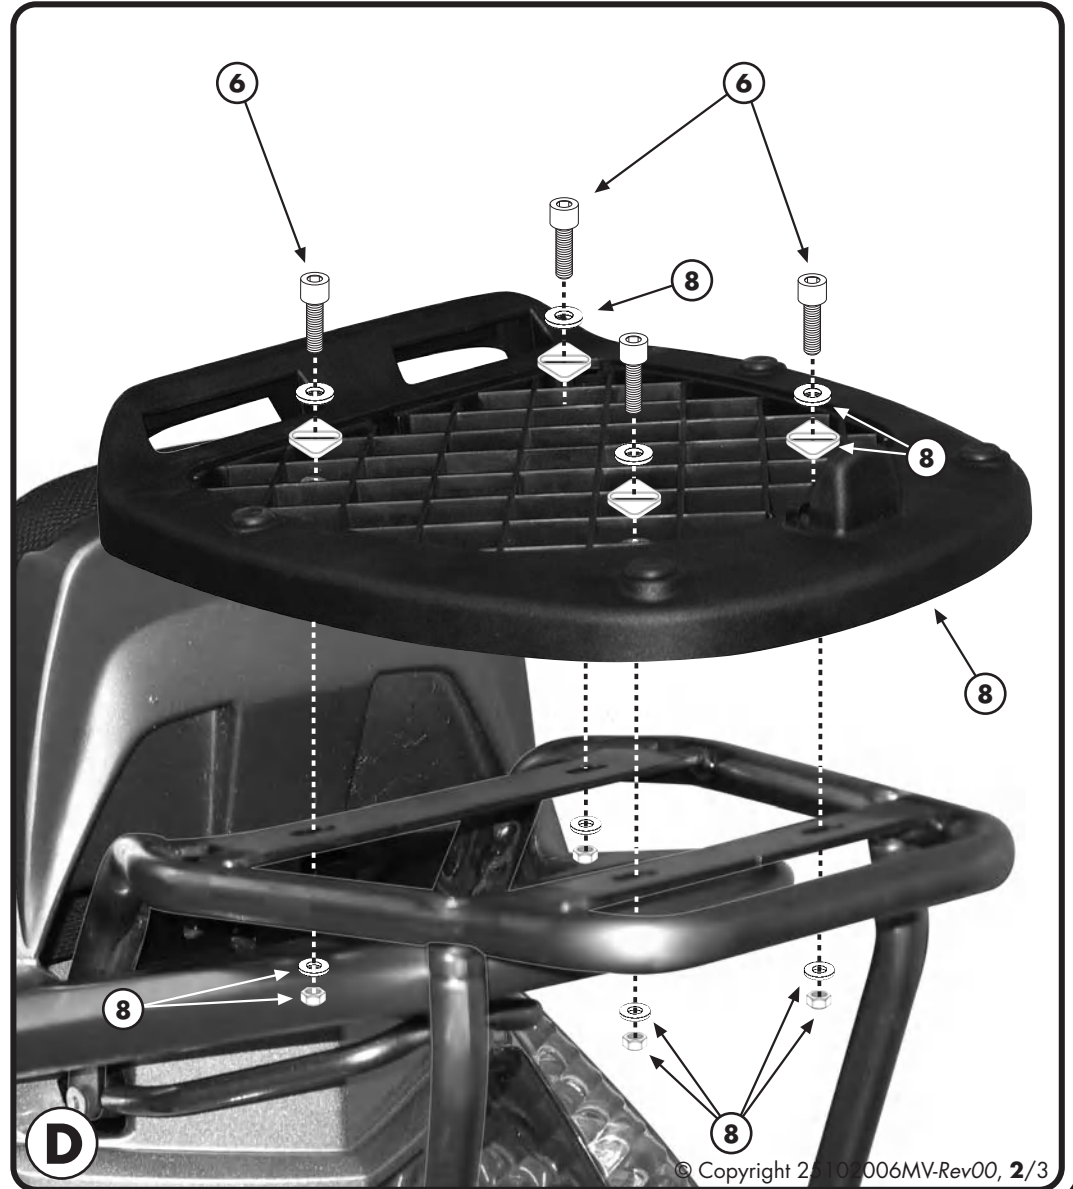

PORTAVALIGIA SPECIFICO - SPECIFIC CASE HOLDER  
 PORTE-VALISE SPECIFIQUE - SPEZIFISCHER KOFFER-TRÄGER  
 PORTA-EQUIPAJE ESPECIFICO

**KYMCO DINK 2007**  
**125cc**

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

## I ISTRUZIONI DI MONTAGGIO

1. ESEGUIRE IL MONTAGGIO ILLUSTRATO IN FOTOGRAFIA A, B E C;
2. MONTARE LA PIASTRA DI AGGANCIAMENTO DEL BAULETTO (NON INCLUSA) COME ILLUSTRATO IN FOTOGRAFIA D;
3. ULTIMARE IL MONTAGGIO CONTROLLANDO CHE TUTTE LE VITI SIANO SERRATE BENE.

## GB MOUNTING INSTRUCTIONS

1. CARRY OUT THE MOUNTING PROCEDURE SUGGESTED IN THE PICTURES A, B AND C;
2. MOUNT THE FITTING PLATE OF THE TOP-CASE (NOT INCLUDED) AS SHOWN IN PICTURE D;
3. LASTLY CHECK THAT ALL SCREWS HAVE BEEN TIGHTENED.

## F INSTRUCTIONS DE MONTAGE

1. REALISER LES MONTAGES PROPOSES EN PHOTOS A, B ET C ;
2. MONTER LA PLATINE DU TOP CASE (NON INCLUSE) COMME ILLUSTRE EN PHOTO D ;
3. TERMINER LE MONTAGE EN CONTROLANT LE BON SERRAGE DE TOUTES LES VIS.

## D BAUANLEITUNG

1. FÜHREN SIE DIE MONTAGE WIE IN DEN BILDER A, B UND C DURCH;
2. MONTIEREN SIE DIE PLATTE (NICHT VORHANDEN) WIE IM BILD D.BESCHRIEBEN;
3. ZULETZT ÜBERPRÜFEN SIE, DASS ALLE SCHRAUBEN FESTGEZOGEN WURDEN.

## ES

## INSTRUCCIONES DE MONTAJE

1. SEGUIR LAS INSTRUCCIONES DE MONTAJE TAL Y COMO SE MUESTRA EN LA FOTOGRAFÍA A, B, E Y C.
2. MONTAR LA PARILLA PORTAEQUIPAJES DEL BAUL (NO INCLUIDA) TAL Y COMO SE ILUSTRAN EN LA FOTOGRAFÍA D.
3. ULTIMAR EL MONTAJE CONTROLANDO QUE TODAS LAS TUERCAS SE HAN APRETADO CORRECTAMENTE.